

NOTES BEFORE USING

1. If this product is missing parts or defective, please reach out to us for free part replacements via service@joytutus.com (Please attach your Amazon order ID in the email). If this product is found incompatible with your vehicle, you could contact us to see if we have other models for your vehicle. Anything you'd like to ask, feel free to contact us.
2. This ski rack holds up to 6 pairs of skis or 4 snowboards.
3. For your safety, check the mounting bolts before each use and drive at speeds under 120 km/h (75 mph).


IMPORTANT

Before installation, please make sure that all accessories are ready.
(As shown in the picture below).

Estimated installation time:

30 minutes


PRODUCT INFORMATION

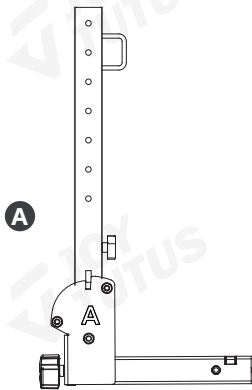


Bottom Support Tube x1




Upper Support Tube x1

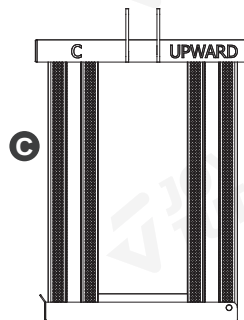

Bottom Main Rack x1

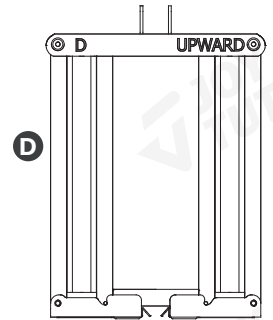


Upper Main Rack x1

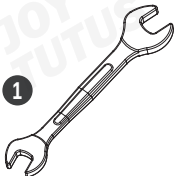


Open-end Wrench (S=13-17) x1



Key x1

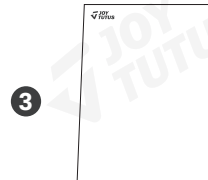

Installation Instruction x1

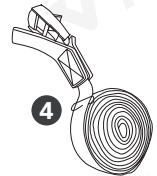

Pull Straps x2



Anti-loose Nuts (M10*P1.5) x4



 
M10 Washers x4



Carriage Bolts (M10*P1.5*L65) x2




Carriage Bolts (M10*P1.5*L75) x2



D-shaped Pins x2



 Webbing Buckles x4



Rubber Tubes x2



Hex key(S=6) x1

Customer Support




Contact us by email: service@joytutus.com

JOYTUTUS help center:
<http://support.joytutus.com>



✓ INSTALLATION COMPLETION DIAGRAM

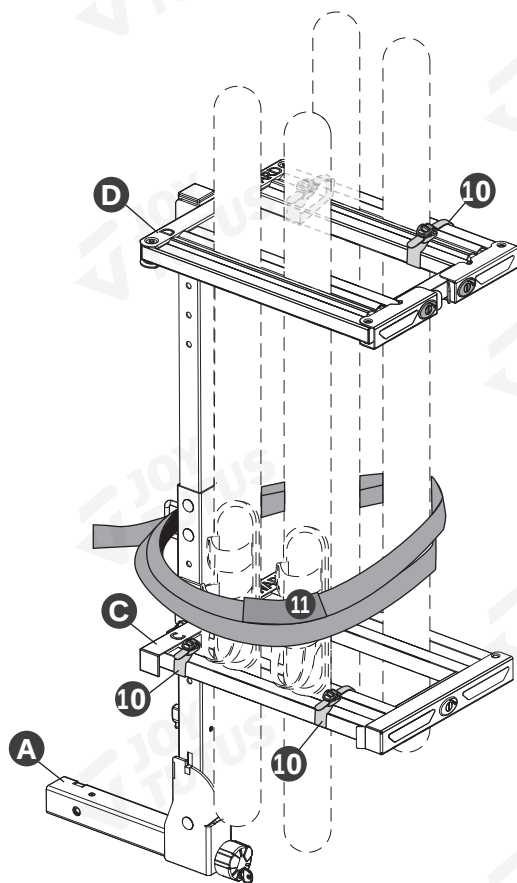


✓ INSTALLATION METHOD

Mounting bracket [A]

Insert the bottom support tube into the hitch receiver. (Using Component **A**)
Turn the red knob clockwise to extend the lock latch until it stops (Do not over-tighten). And then turn the key counterclockwise to lock the rack.

NOTE: Hold the red knob with your hand when you want to lock or unlock the key.



Required accessories:

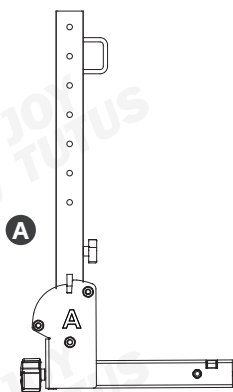

Bottom Support Tube x1



Key x1

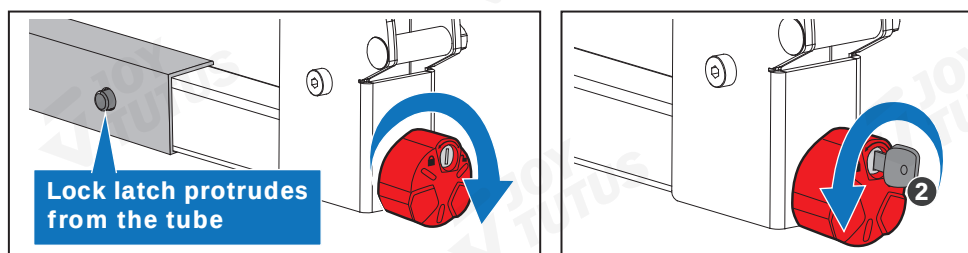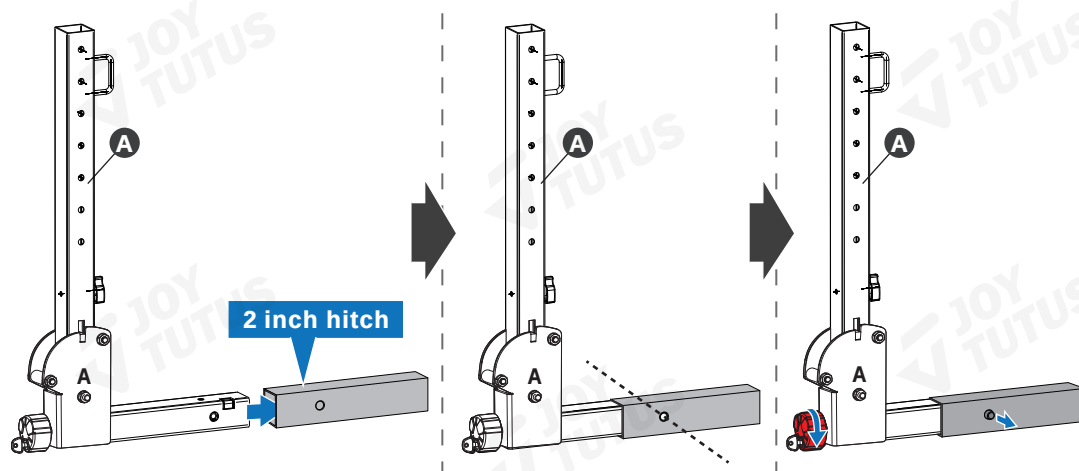


Mounting bracket [B]

Insert the upper support tube into the bottom support tube. By using 2 carriage Bolts and 2 washers and 2 nuts and tighten them.
(Using Component **B 5 6 7**)

Required accessories:



Upper Support Tube x1

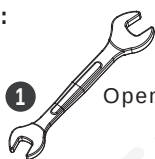

1 Open-end Wrench (S=13-17) x1





5 Anti-loose Nuts (M10*P1.5) x2



6 M10 Washers x2




7 Carriage Bolts (M10*P1.5*L65) x2

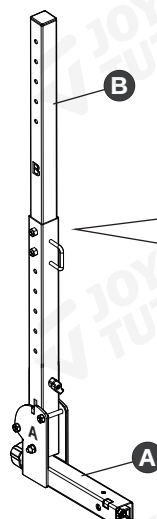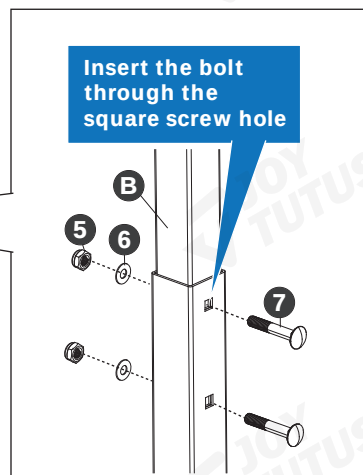


Mounting bracket [C] and [D]

"UPWARD" sign faces upward. By using 1 carriage bolt and 1 washer and 1 nut to connect them (Use the bolt hole according to your need and leave the last bolt hole for D-shape pin). And then insert the D-shape pin for folding limit position.
(Using Component **C D 5 6 8 9**)


Required accessories:

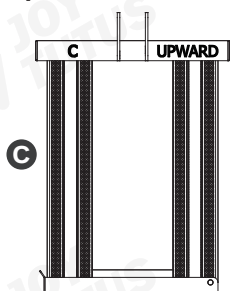

Bottom Main Rack x1

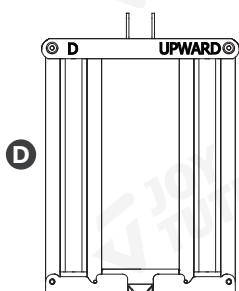

Upper Main Rack x1

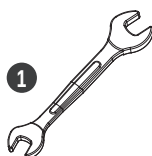

1 Open-end Wrench (S=13-17) x1



 
5 Anti-loose Nuts (M10*P1.5) x2





6 M10 Washers x2



8 Carriage Bolts (M10*P1.5*L75) x2



9 D-shaped Pins x2

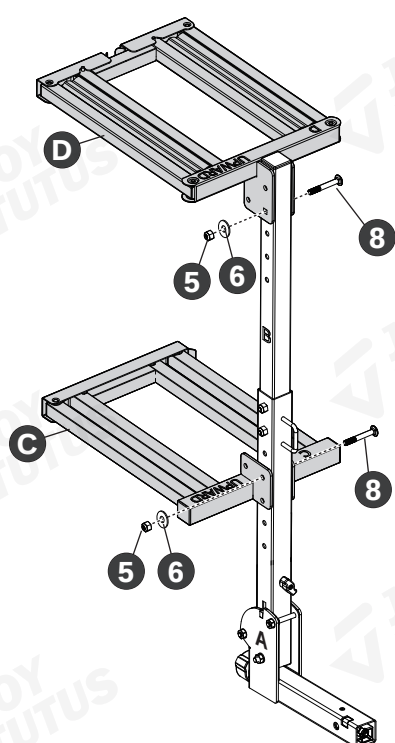
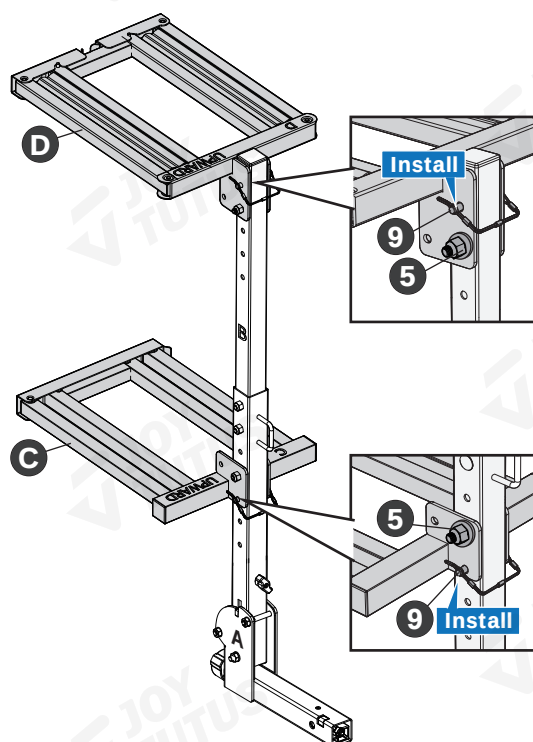


✓ FUNCTION DISPLAY

Storage brackets [C] and [D]

Fold down the rack without ski boards. First, take out the D-shaped latch and fold down the main rack. Then insert the D-shaped pin once it's settled. Follow the same steps for the upper and bottom main racks.

NOTE: The order of this step is important. Bottom main rack needs to be folded up first, and then fold the upper main rack down.

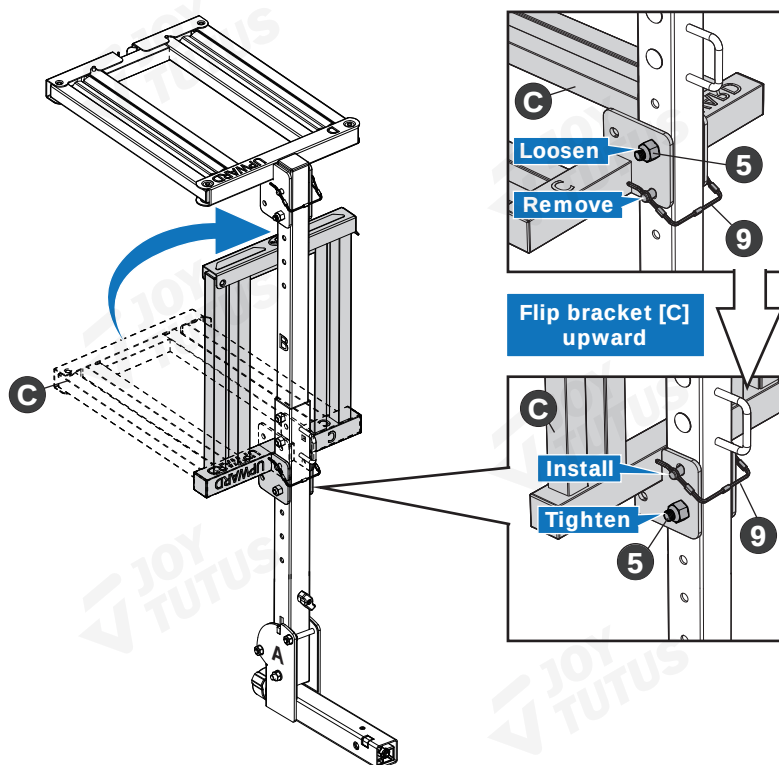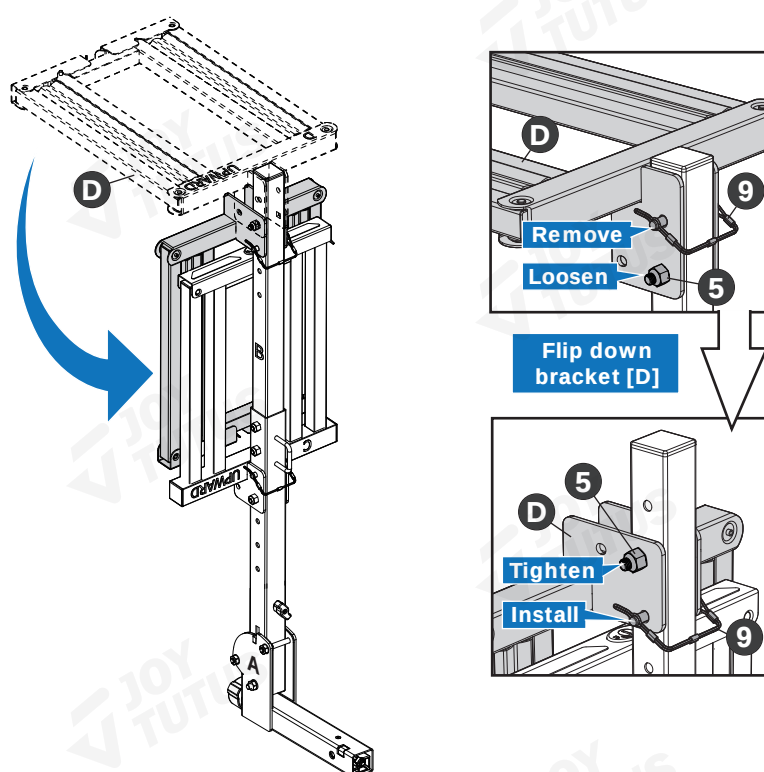

Loading ski boards

Required accessories:



Pull Straps x2




Webbing Buckles x4



Rubber Tubes x2


STEP 1

Use the key to unlock.

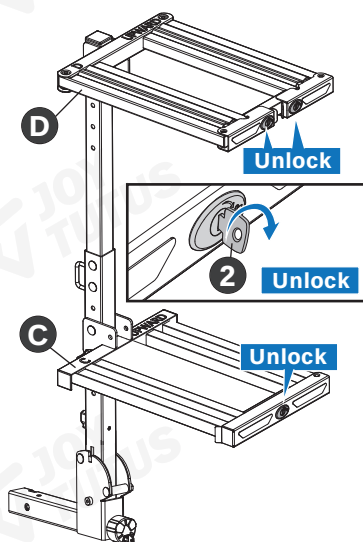


STEP 2

Open the outer cover.

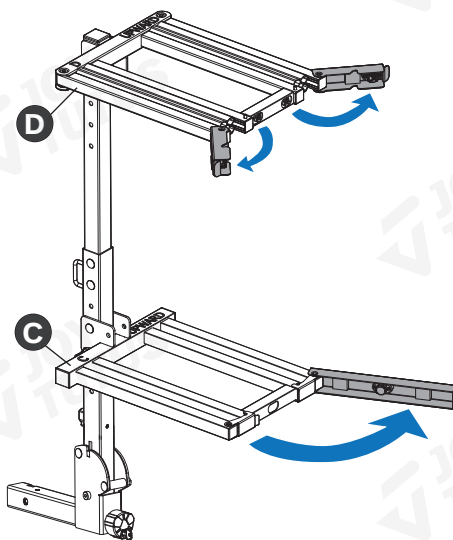


STEP 3

Open the inner cover.

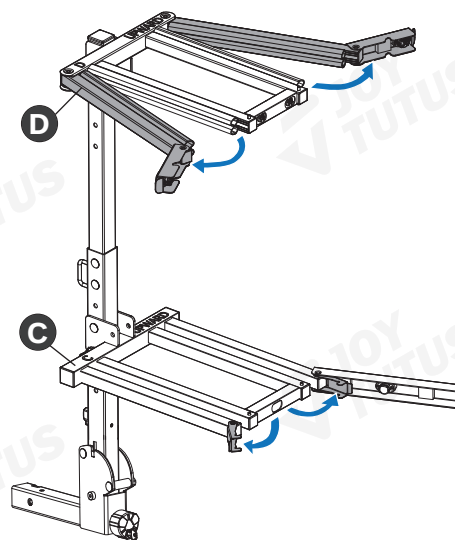


STEP 4

Load the ski boards.

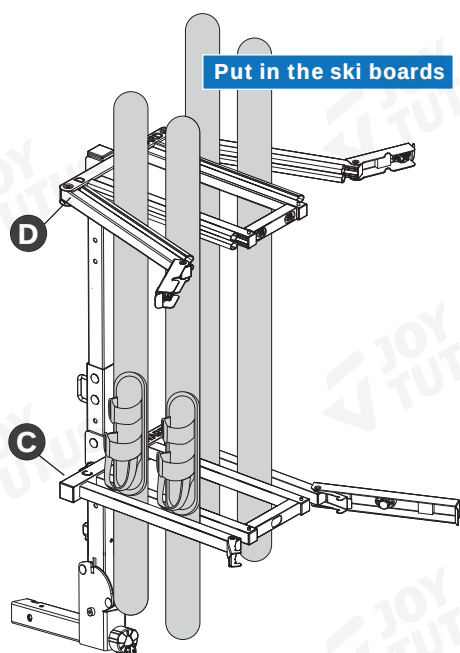

STEP 5

Close the inner and outer cover.

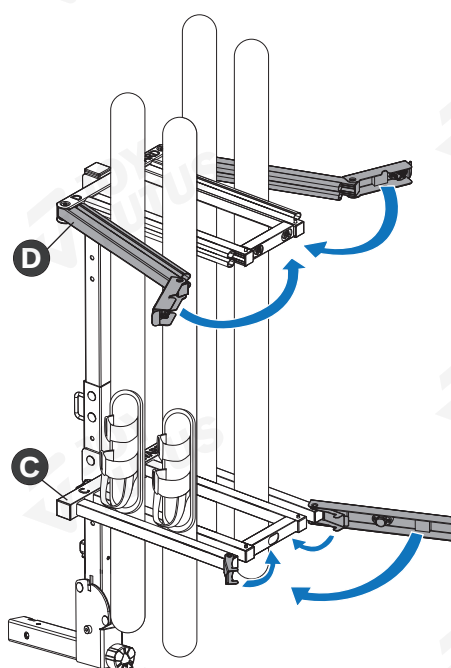

STEP 6

Lock the outer cover. After loading the boards, use the strap to loop them with the rack.

Required accessories:

 


Pull Straps x2


Equipped with two pull straps, it is possible to bind two when necessary.



Webbing Buckles x4



Rubber Tubes x2

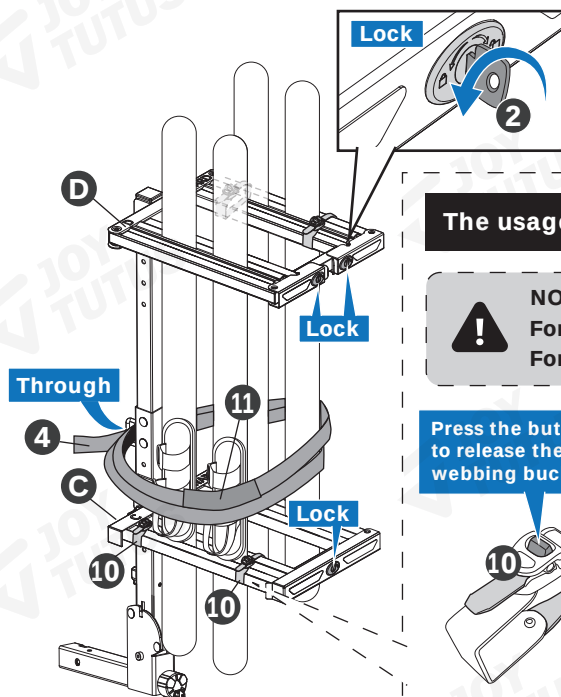


The usage method of webbing buckle ⑩




NOTE:

For skis without bindings, use the upper bracket.
For skis with bindings, use the lower bracket to prevent collisions.


Press the button to release the webbing buckle

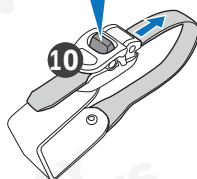

Stuck on the sled frame

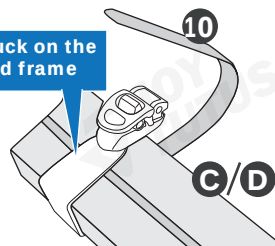

The swing switch tightens the webbing buckle

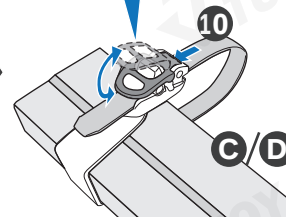


Tilt-Away Feature for Trunk Access




Warning

Hold the ski rack when placing down to prevent collisions.

Turn the red knob clockwise to lay the holding arm 40° down

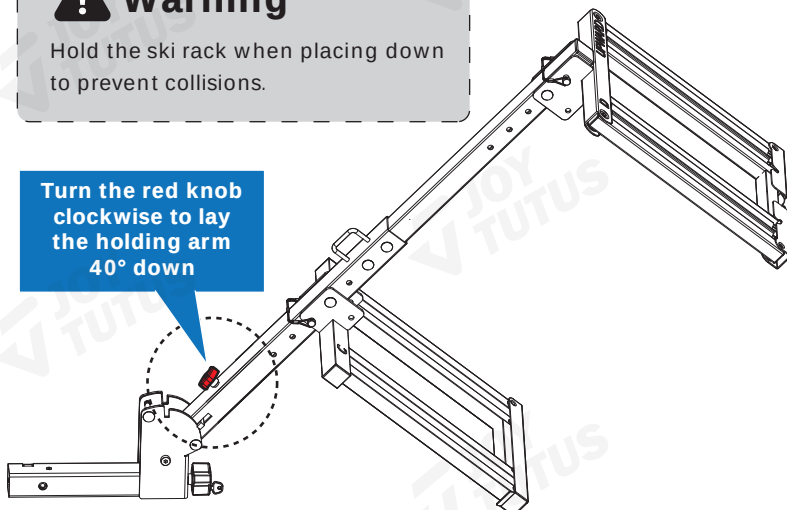

Required accessories:

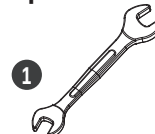

Open-end Wrench (S=13-17) x1



Hex key (S=6) x1

TIPS:

To reduce abnormal noise caused by shaking, you can use a tool to tighten the three screws/nuts shown in the illustration (but do not over-tighten)

