


IMPORTANT

Before installation, please make sure that all accessories are ready. (As shown in the picture below)



PRODUCT INFORMATION

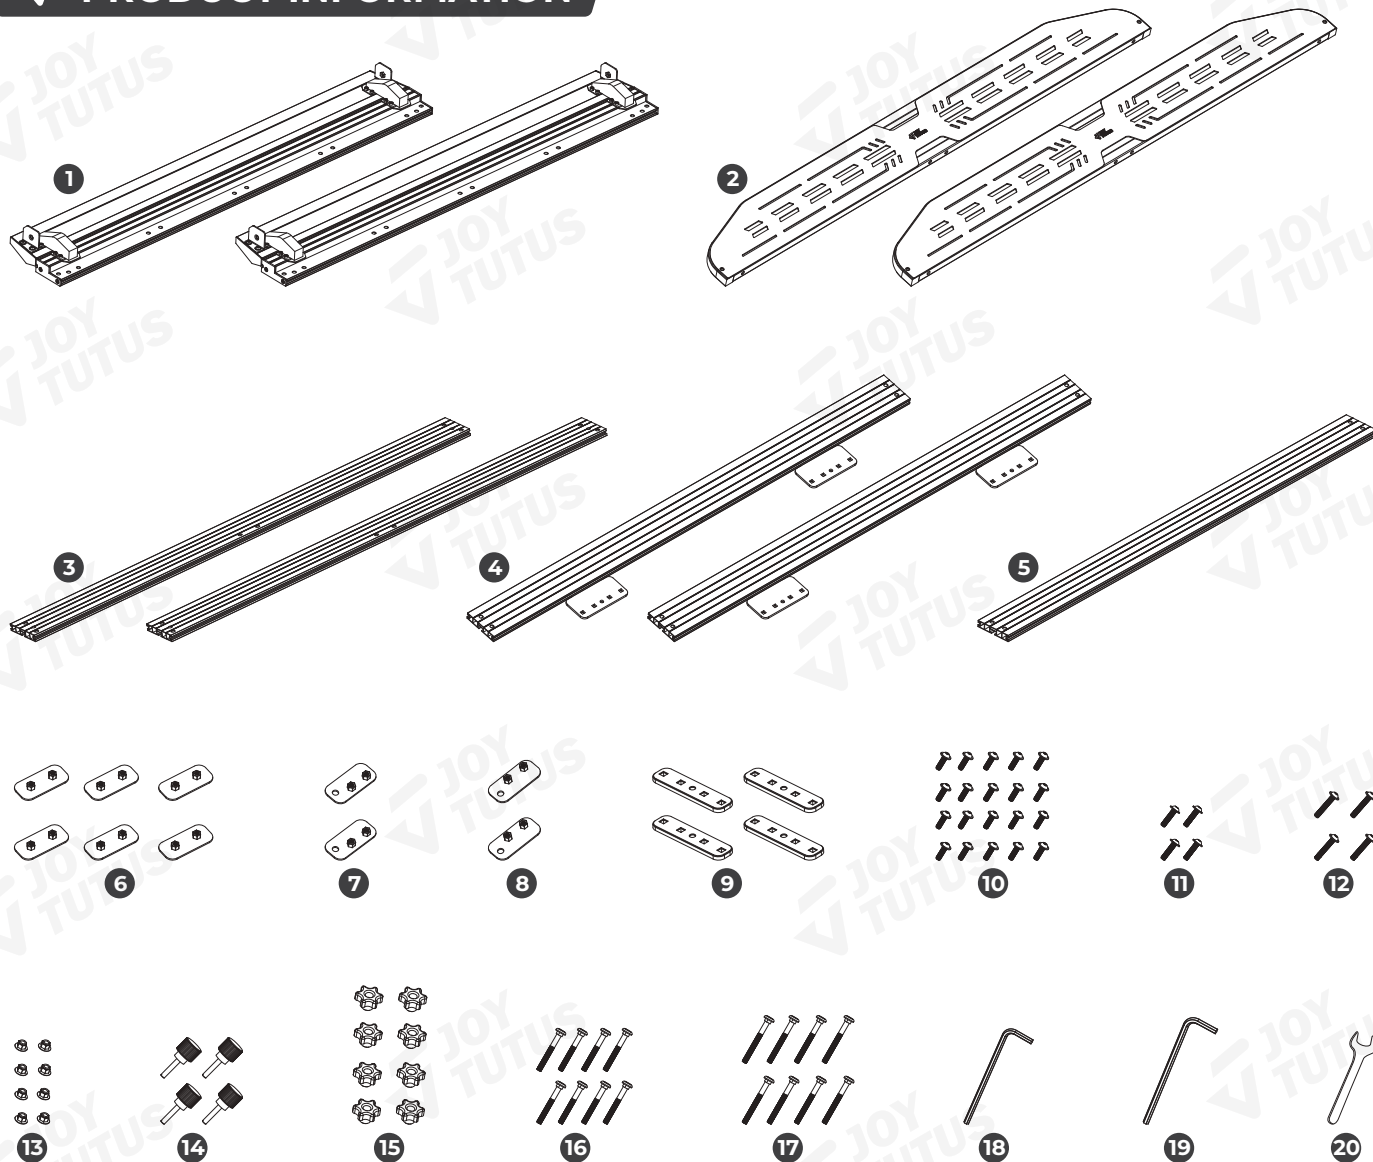




1	Folding rail	x2	11	Flat head hex screw with washer M6*45	x4
2	Guardrail	x2	12	Flat head hex screw with washer M6*60	x4
3	Guardrail longitudinal rod	x2	13	Locknut with washer M6	x8
4	Installation end longitudinal rod	x2	14	Hand-tightened screw M6	x4
5	Longitudinal rod	x1	15	Hand-tightened nut M6	x8
6	Clamping block	x6	16	Carriage bolt M6*55	x8
7	Clamping block A	x2	17	Carriage bolt M6*70	x8
8	Clamping block B	x2	18	Hex key 3mm	x1
9	Fixing cover plate	x4	19	Hex key 4mm	x1
10	Flat head hex screw with washer M6*40	x20	20	Open-end wrench 10mm	x1

✓ INSTALLATION METHOD





Step 1

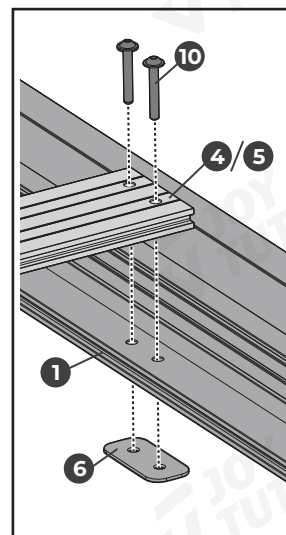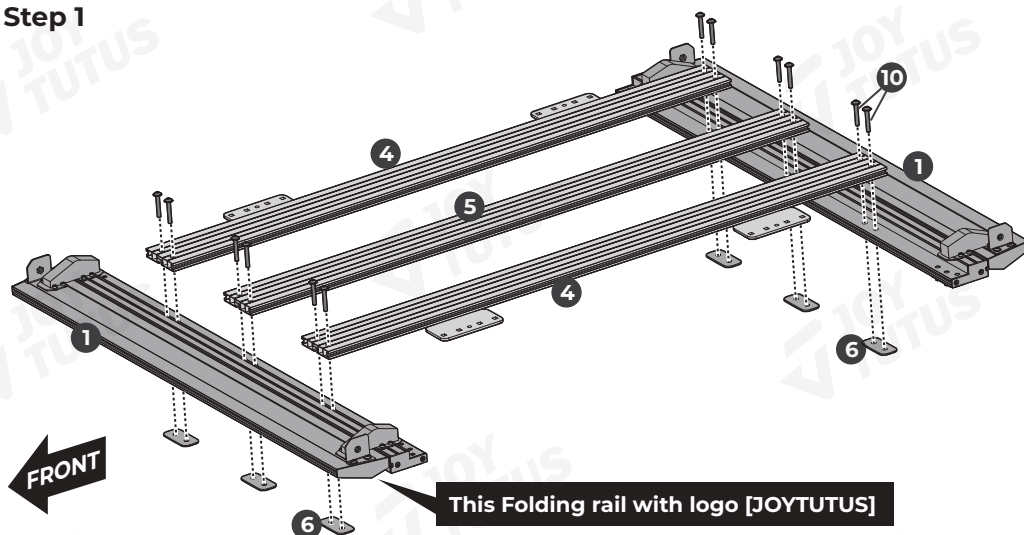


Step 2

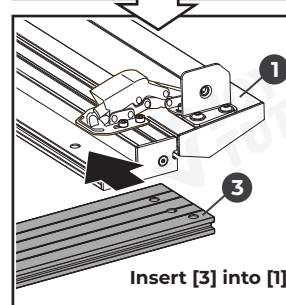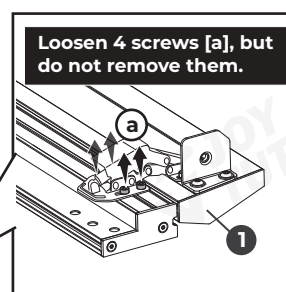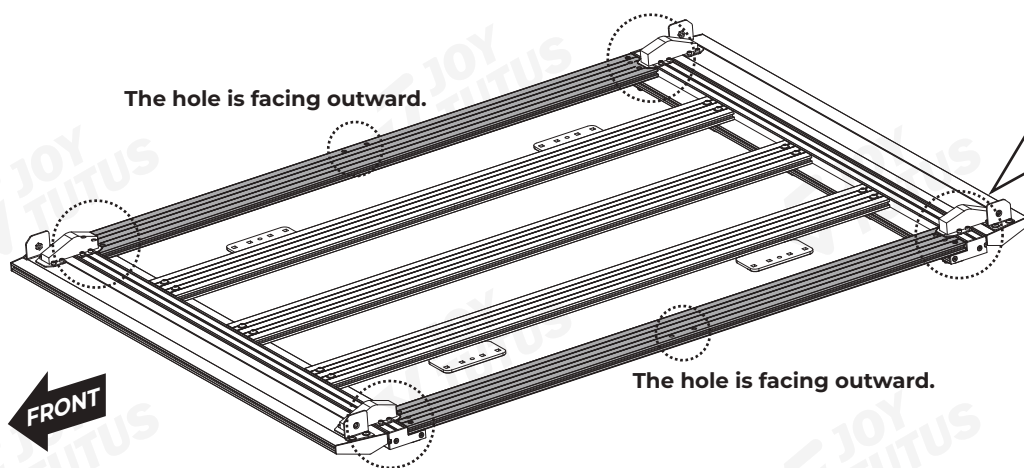





Step 3

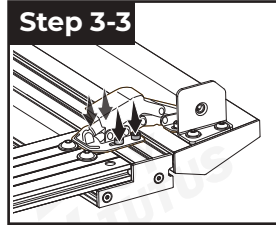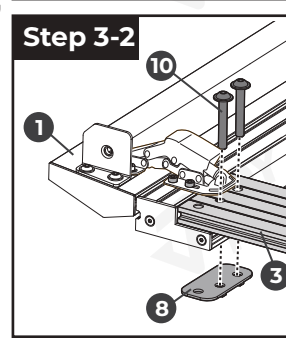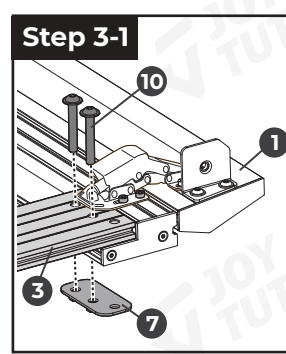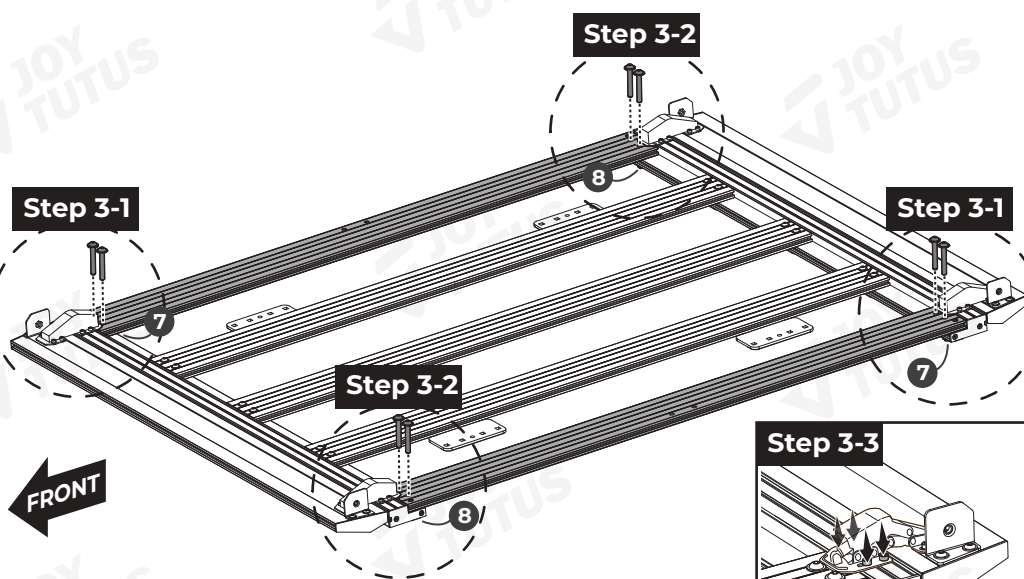


Step 4

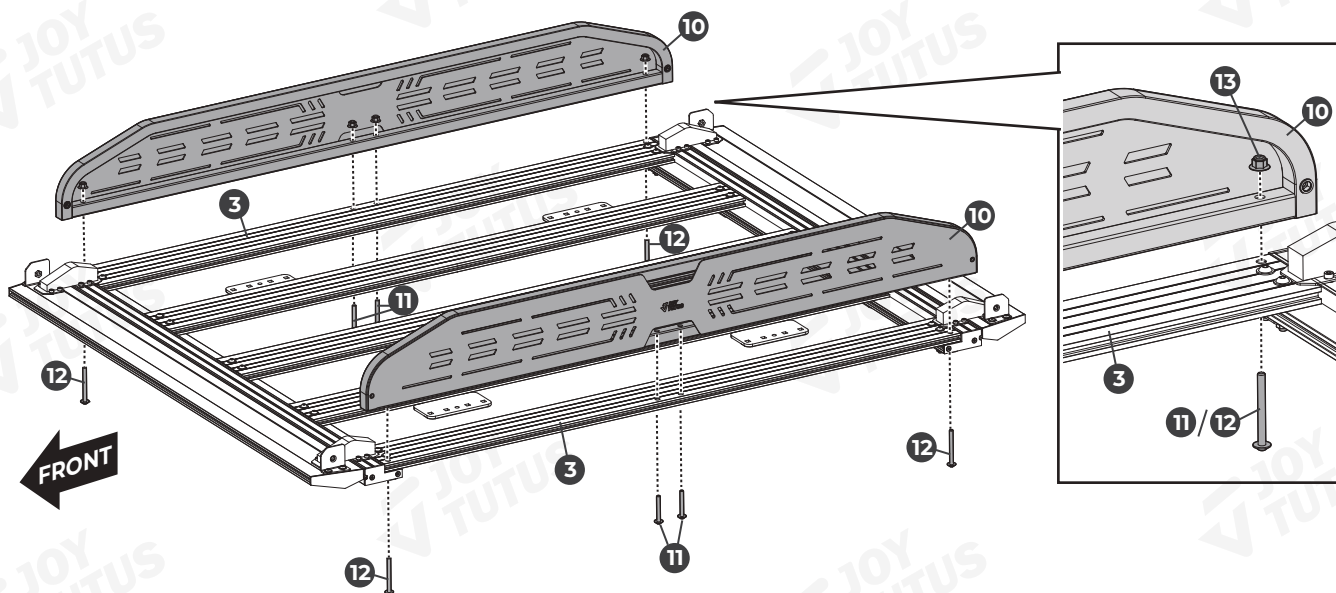


Step 5

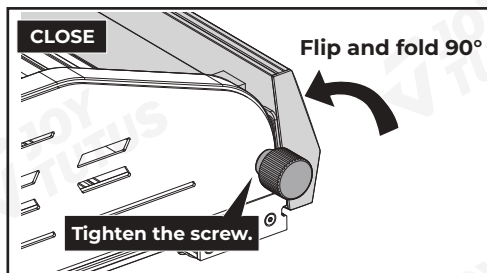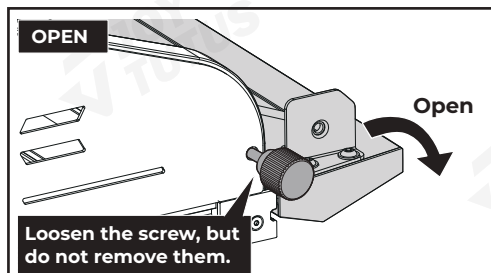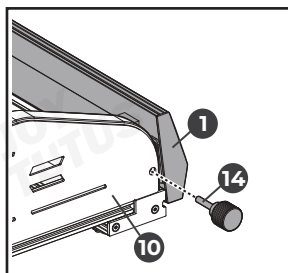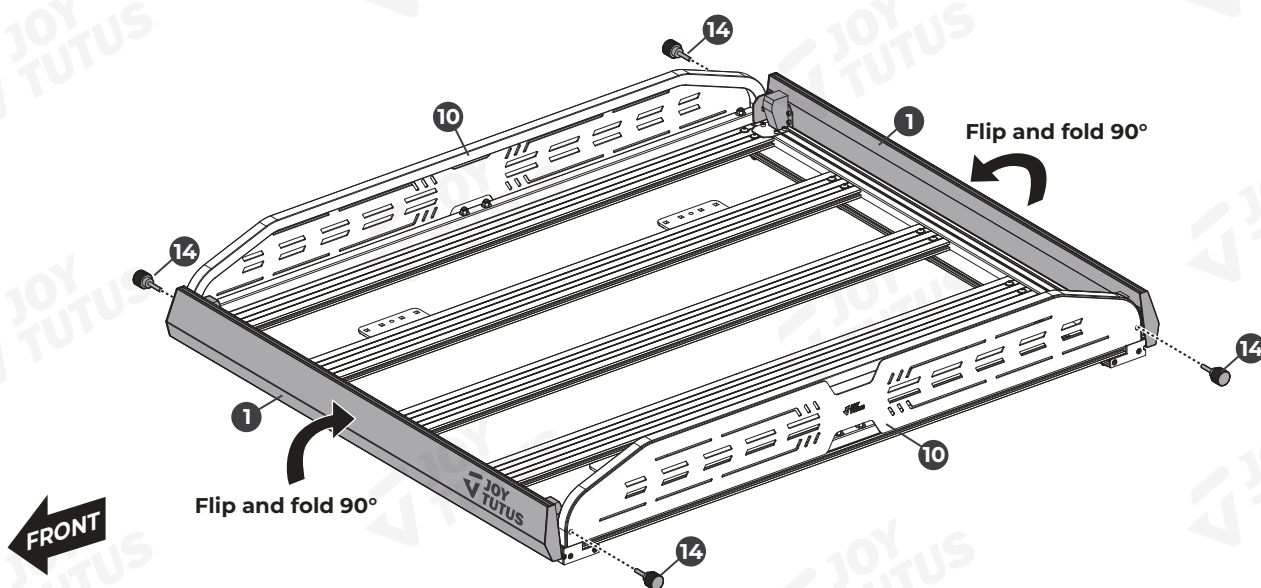

Step 6

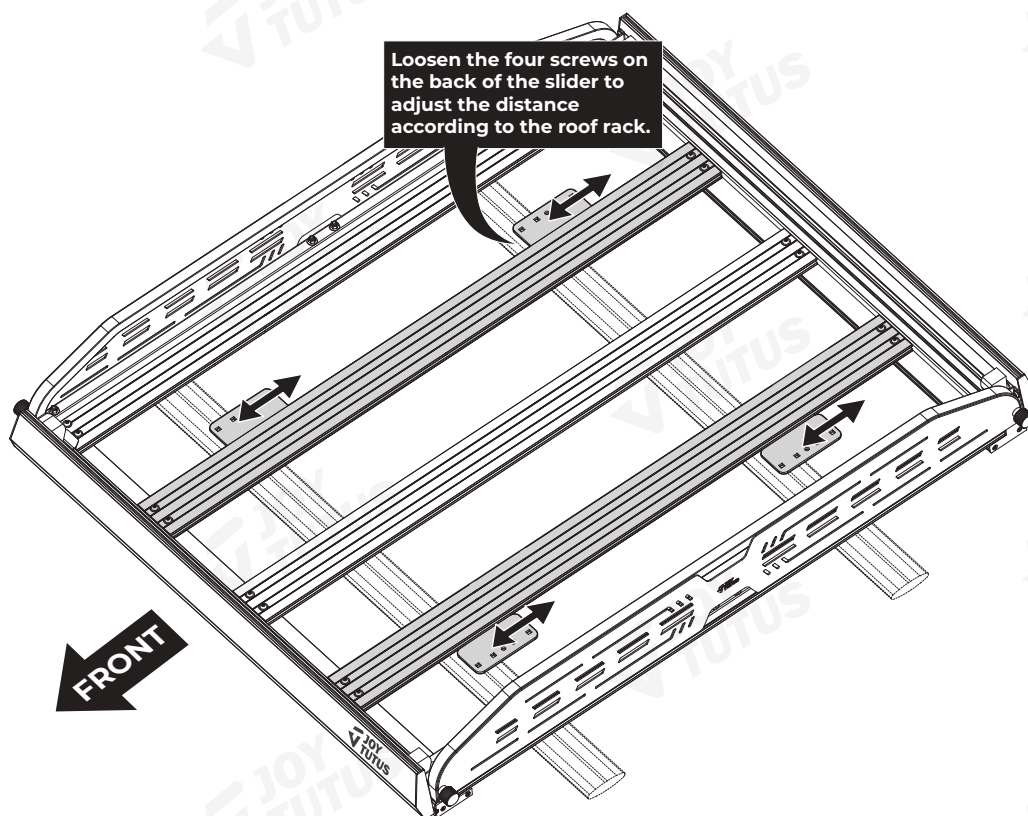

Step 7

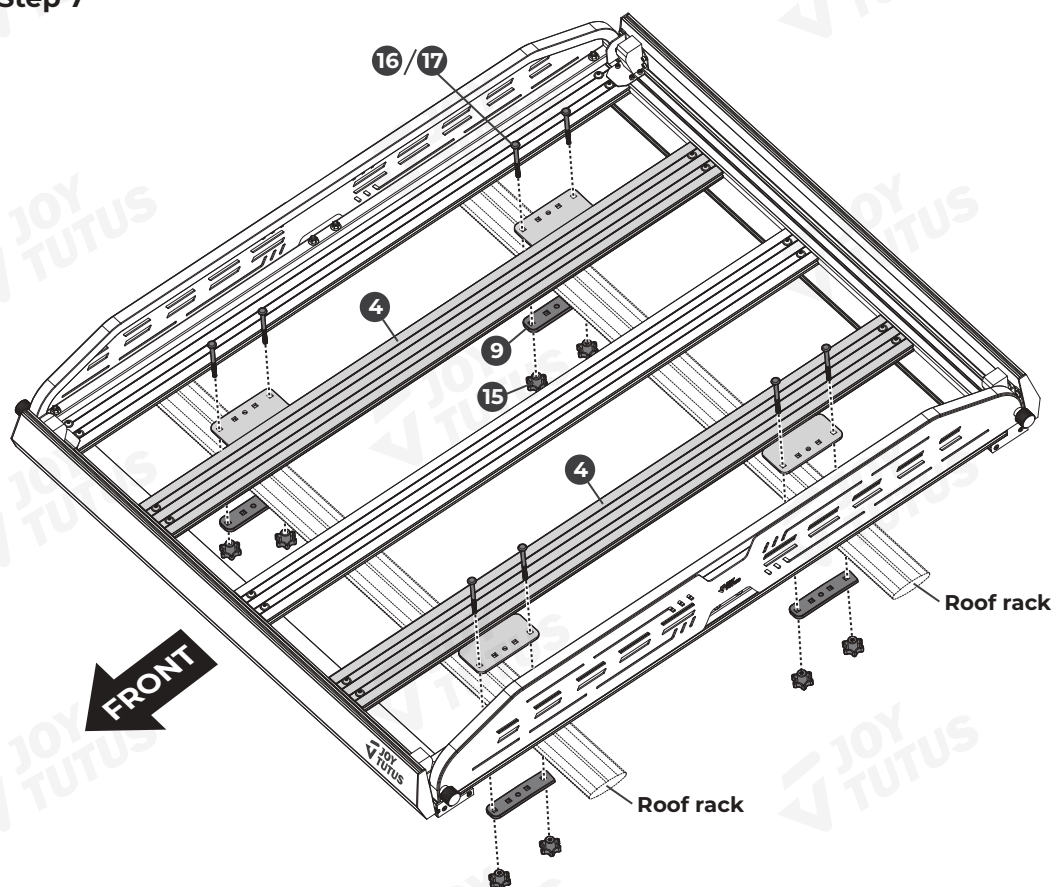

[16][17] Select as needed.

