

IMPORTANT

Before installation, please make sure that all accessories are ready.
(As shown in the picture below).

Estimated
installation time:

40 minutes

CUSTOMER SUPPORT




Contact us by email:
service@joytutus.com

JOYTUTUS help center:




<http://support.joytutus.com>


PRODUCT INFORMATION

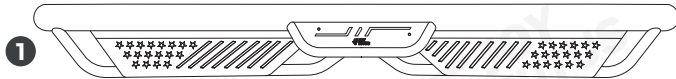


Left Pedal **x1**

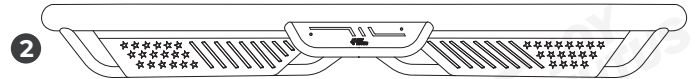

Right Pedal **x1**

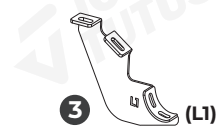


Left Front Bracket **x1**

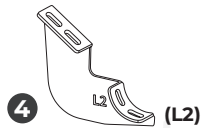

Left Middle/Rear Bracket **x2**



Right Front Bracket **x1**

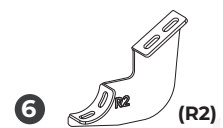

Right Middle/Rear Bracket **x2**

(Include 2 spares)



M10x30 Hexagon
Head Bolt **x14**



M8x25 Hexagon
Head Bolt **x14**



M10x25 Large
Washer **x14**



M8x24 Large
Washer **x14**




M10 Spring
Washer **x14**




M8 Spring
Washer **x14**

(Self-provided Tools)



13mm Open-End Wrench




16mm Open-End Wrench



S=4 hex key

INSTALLATION COMPLETION DIAGRAM

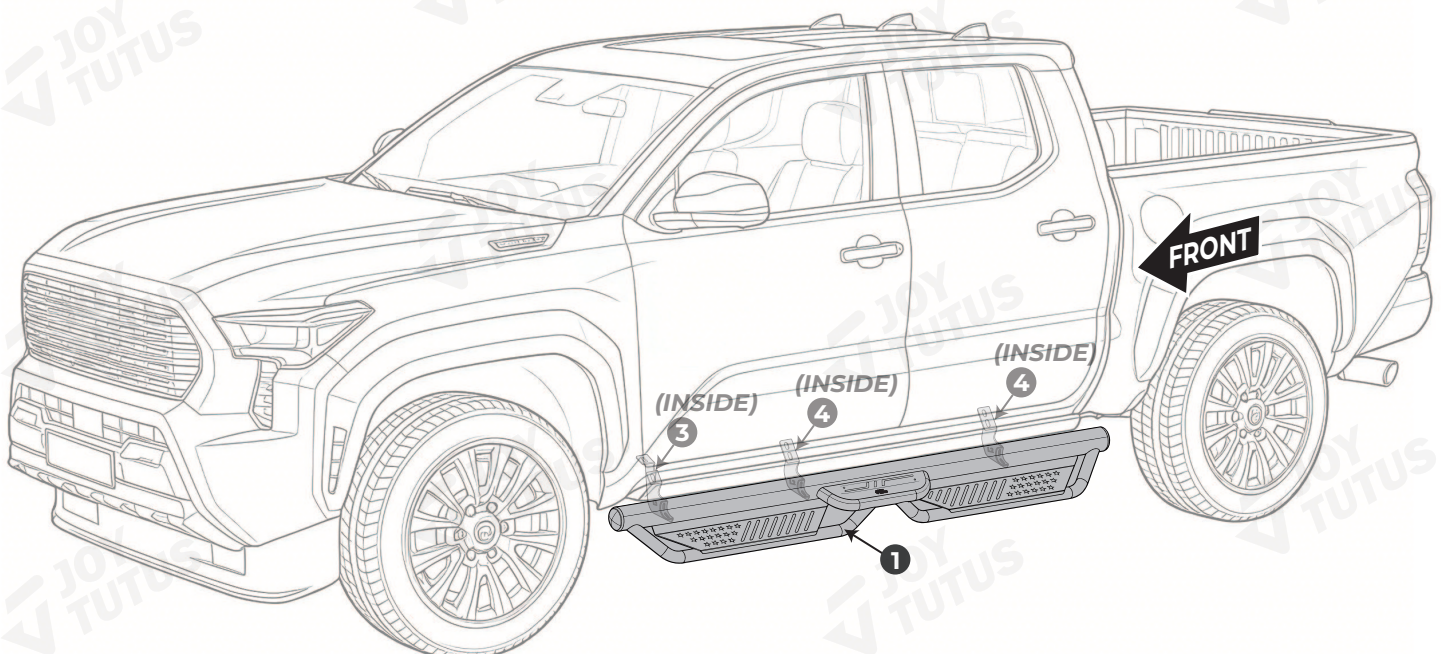

✓ INSTALLATION METHOD



When installing this product, first park the vehicle in a safe area and turn off the engine.

STEP 1



If the original pedal is already installed, please remove it first.
If there is no original pedal, proceed directly to STEP 2.

Remove the factory rock rails if equipped.


1.Remove bolts and nuts on inner rocker panel.

2.Remove the factory rocker rail from inner rocker panel.


Note:The step bar and factory rock rail cannot coexist.

STEP 2

Required accessories:

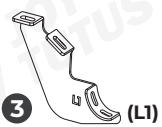

3 Left Front Bracket x1

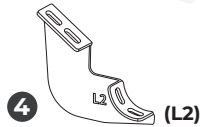

4 Left Middle/Rear Bracket x2




8 M8x25 Hexagon Head Bolt x6




10 M8x24 Large Washer x6



12 M8 Spring Washer x6




13mm Open-End Wrench (self-provided)

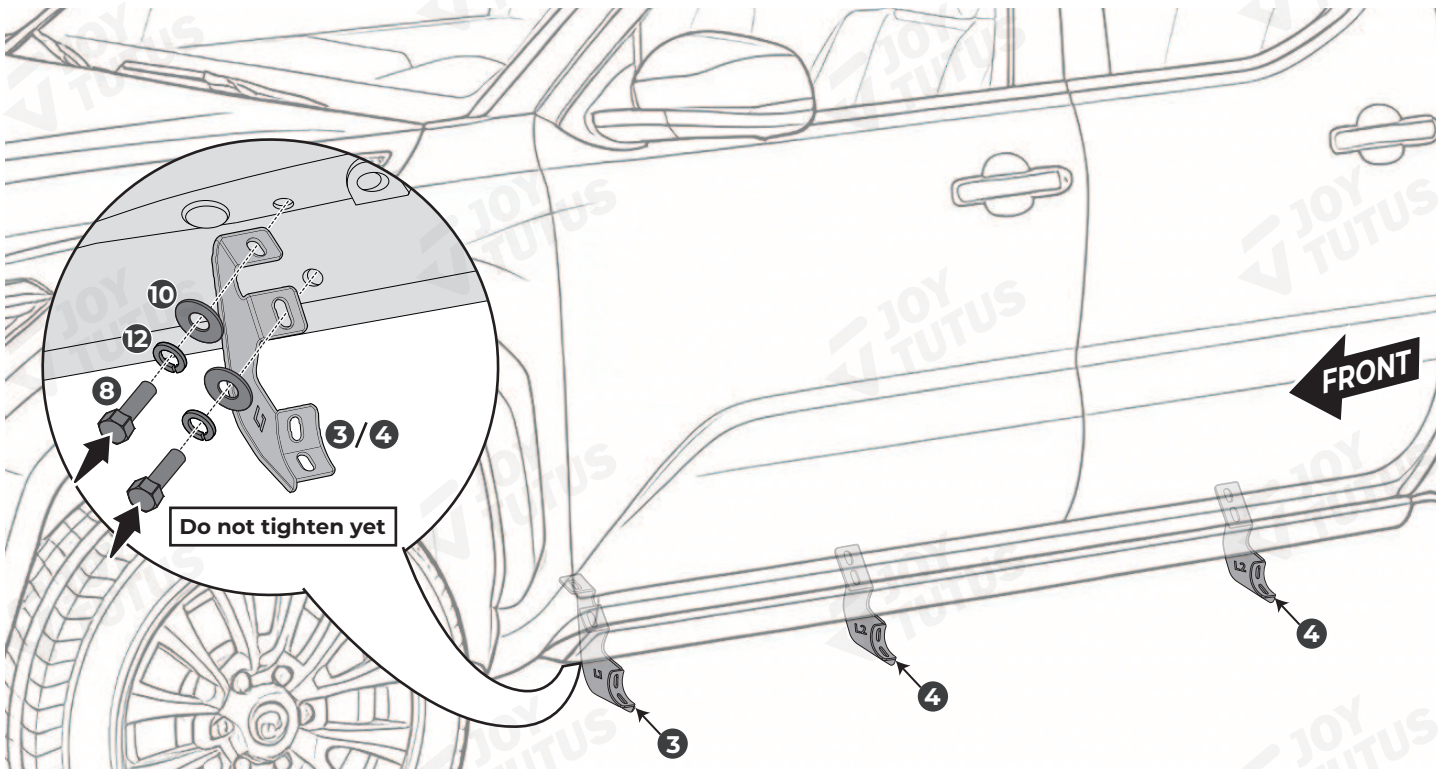


STEP 3

STEP 3-1: Before installing the pedals, *pay attention to distinguishing between the left and right sides.*

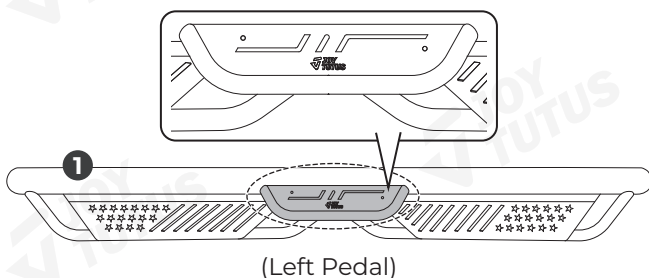

(Left Pedal)

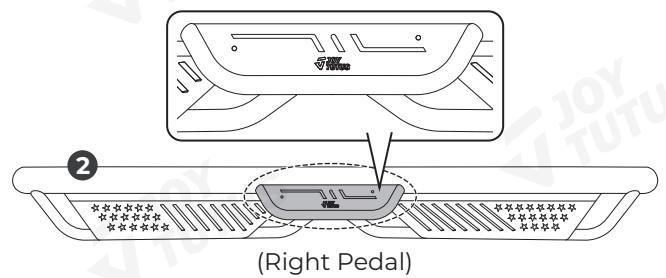


(Right Pedal)

STEP 3-2:

Required accessories:

1



Left Pedal x1

7



M10x30 Hexagon Head Bolt x6

9




M10x25 Large Washer x6


11



M10 Spring Washer x6




16mm Open-End Wrench (self-provided)

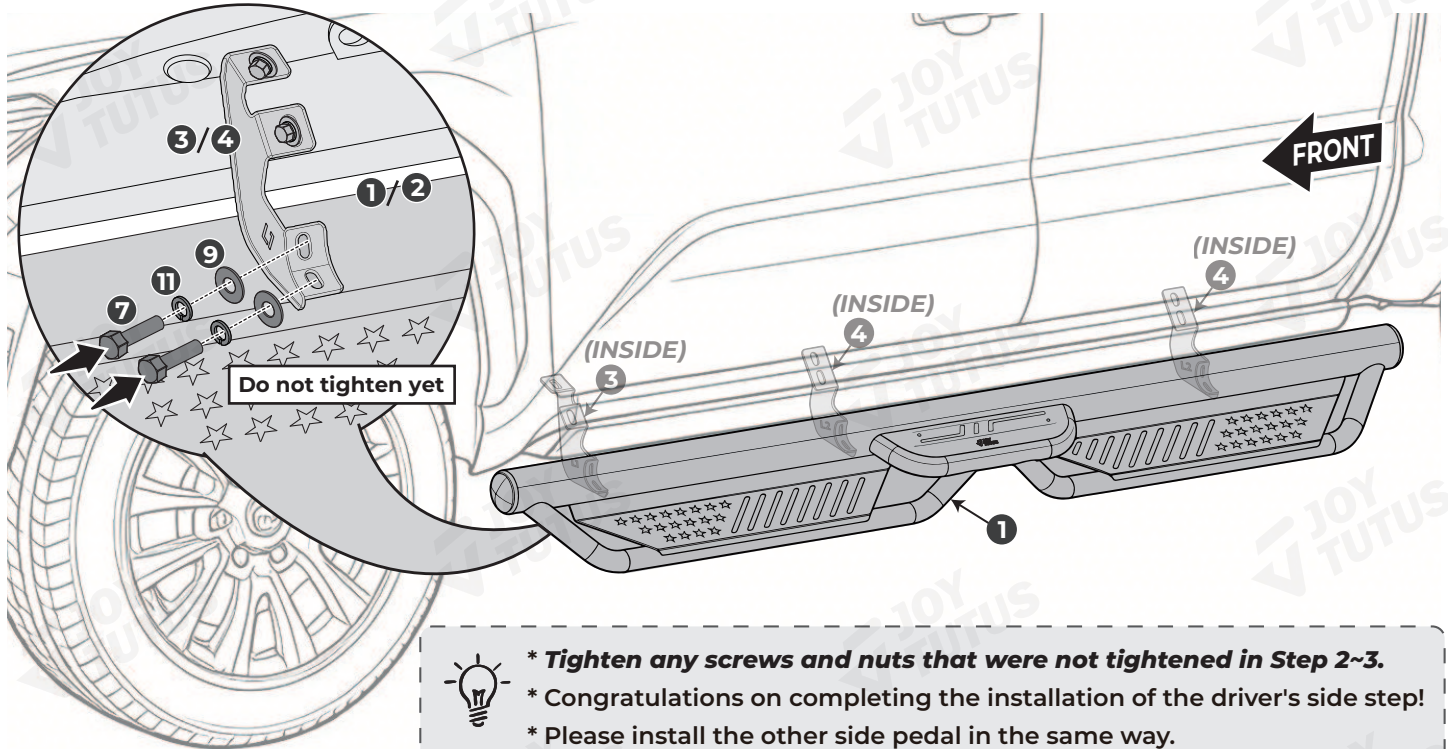

- * Tighten any screws and nuts that were not tightened in Step 2~3.
- * Congratulations on completing the installation of the driver's side step!
- * Please install the other side pedal in the same way.

FUNCTION


Required tools (self-provided):



S=4 hex key

STEP 1

Disassemble the screw and nut,
Remove the decorative piece

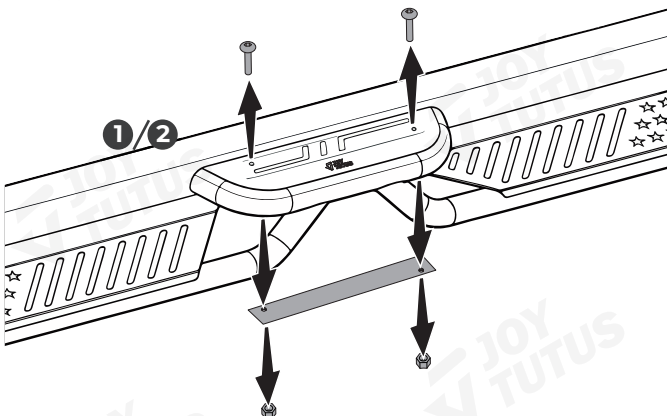

STEP 2

The decorative panel can be sprayed with the desired color using your own spray paint and then reinstalled.

Spray the decorative panel with the desired color using your own spray paint.

